ACEWELL e-Scooter/e-Vehicle Computer ACE-5614EC-1 User Manual

Thanks for purchasing the e-Scooter/e-Vehicle computer; please read the manual before using it.



PANEL DESCRIPTIONS

1.Bar-Boost display Scale

2.Bar-Boost display

3.1st row: Speedometer

4.2nd row: Other function

5. LED Indicators

6. MODE Button

7. RESET Button 8. Bar SOC

9. Bar temperature gauge

10. Assist Level

FEATURES

- Multi-functional LCD electric Bike/Vehicle computers indicate bar-graphic speedometer, Speedometers, bar SOC, bar temperature meter and one of other functions simultaneously.
- CANBUS protocol V2.0B.
- The 2nd row of LCD indicates message from controller or battery.
- Built-in 7 individual control LED indicators.
- Odometer and total running timer are stored in memory, even when the power is off.
- Built-in backlight will be turned on when light is switched on.
- Wide wheel circumference setting rang: 1-3999mm.
- Metric/Empire unit option available.
- Excellent water resistant, anti-vibration structure and noise immunity design.

SPECIFICATIONS


| Functions | Symbol | Specifications |
|---------------------|-------------|----------------------------------|
| Bar -boost function | | 10-100% |
| Speedometer | Km/h or MPH | 2.4-200.0Km/H(124MPH) |
| Trip Meter | TRIP 1&2 | 0.0-999.9 KM/Miles |
| Odometer | ODO | 0 - 999999 KM, 0-624999 Miles |
| Maximum Speed | MAX | 2.4-200.0Km/H(124MPH) |
| Running Timer | RT | 0-99H59`59`` |
| Total Running Timer | TT | 0-9999Н59', |
| Average speed | AVG SPD | 2.4-200.0Km/H(124MPH) |
| Maximum speed | MAX SPD | 2.4-200.0Km/H(124MPH) |
| Voltage meter | [==] | Follows protocol from controller |
| Digital temperature | ₽ | Follows protocol from controller |
| Bar SOC | C: | 21bars for 0-100% |
| Bar Temperature | 6 | 21bars for 0-100% |

Power Input DC 12V or 24V Protocol CANBUS V2.0B Speed Signal From controller Wheel circumference setting From controller protocol **Power Consumption** 5mA at on status without backlight 45mA with backlight

WIRING DIAGRAM

130.1mm x82.8mmx27.0 mm

Dimensions

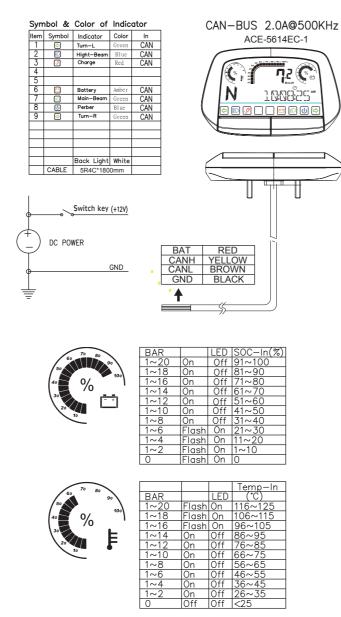

FUNCTIONS

: Bar-boost function

The bar-graph shows the power output of motor.

Km/H or MPH: Speedometer

Displays speed meter up to 200.0 Km/H.

TRIP: Trip Meter

TRIP function accumulates trip distance since last RESET as long as bike/vehicle is moving.

ODO: Odometer

- 1.0DO accumulates total distance traveled.
- 2.0DO data is adjustable when it is less than 30km (18.6 Miles), after that it stored in memory and cannot be reset.

MAX SPD: Maximum Speed

Displays highest speed achieved since last Reset operation.

AVG SPD: Average Speed Meter

It calculates average speed from last RESET. The AVG is calculated by the speedometer from TRIP be divided by RT.

RT: Riding Timer

- 1. Calculates total running time since last RESET.
- 2. Counter automatically begins with movement.

TT: Total Riding Timer

- 1. Calculates total riding time from the beginning of the bike.
- 2. TT data is stored in memory, and couldn't be reset.

: Digital Voltage Gauge

It checks bike's battery and charging systems health. Signals are from controller.

F: Digital temperature meter

- 1. It displays temperature in ${}^{\circ}\mathbb{C}$ or ${}^{\circ}\mathbb{F}$.
- 2. The LCD screen flashes the digits of temperature when the temperature is higher than the preset warning temperature.

: Bar-graphic SOC

It displays 0-100% of SOC.

:Bar-graphic temperature meter

- 1.It has 21 bars, the 20th bar is the same as preset temperature.
- 2. The temperature bar-graphic flashes when temperature is higher than the preset warning temperature.

Assist Level

It displays the assist level of the bike. .

BUTTON OPERATIONS

MODE Button

1. Press the MODE button to move between all functions in sequence as " \rightarrow " from one function screen to another.



- 1.Press MODE button to the desired screen then press RESET button for 2 seconds to reset MAX SPD, AVG SPD data from stored values to zero individually.
- 2.The data of Trip, AVG & RT will all be reset at the same time when one of the 3 data functions is being reset.
- 3.0DO and TT data cannot be reset.



Bar-Boost, Wheel CIRCUMFERENCE, Unit, SPD Decimal, Maintain, Drop and ODO Setup

- 1. Setup operations include bar-graphic speed, Warning temperature, speedometer units and assist level adjustment. These must be set up step by step. The computer will be automatically reverted to normal mode if no button is pressed for 75 seconds at any setting screen.
- 2.Press both MODE & RESET buttons to go into setting mode. In setting mode, each press of the RESET button increments the flashing digit by 1 or converts units. Press MODE button to confirm the digit setting and warning jump to next digit or next setting screen to be set. Press MODE button for 2 seconds at any setting screen to finish the setting and go to normal mode
- 3.It displays speedometer scale 80 & SPD01 or 160 & SPD02. Operates buttons as descriptions of item 2 to finish bar-graphic speedometer scale setting and jump to warning temperature setting.
- 4.It displays " ALARM & flashing number of XXX", the range of temperature setting is from 80°C to 135°C. Operates buttons as descriptions of item 2 to finish bar-graphic speedometer scale setting and jump to speedometer units setting.
- 5.It displays "SPd UNIT & flash Km/H or MPH", each press of RESET button converts unit; press MODE button to confirm unit setting and jump to assist level setting.
- 6.It displays "ASSIST & a flash digit", the digit can be set from 0 to 4. Follow the item 2 of button operation to finish the setting and jump to speedometer scale setting or return to normal mode by press and hold the MODE button for 2 seconds.

